

IMPORTANT PRECAUTIONS

When using electrical appliances, especially when children are present, it is necessary to observe basic precautions.

To avoid electric shock:

- Before cleaning the appliance, disconnect it from the mains.
- Do not use the appliance in the bath or shower, do not drop it into water or other liquids.
- Do not touch an electrical appliance that has fallen into the water! Disconnect it from the network immediately.

To avoid burns, fire or injury:

- Use this appliance only for the purposes described in these operating instructions. Do not use devices that are not recommended by the manufacturer.
- Never leave this appliance plugged into the mains unattended.
- When the appliance is used by children or disabled people, careful monitoring of its operation is necessary.
- Never operate the appliance if the cord or plug is damaged.
- Keep the cord away from heated surfaces. Do not pull or bend the cord, and do not wind it on the appliance.
- Do not drop the appliance. Do not insert foreign objects into its holes.
- Before using this appliance, make sure that the knives are properly adjusted.

Warranty obligations:

1. The manufacturer guarantees the operation of the product under the conditions of transportation, storage and operation.
2. Warranty obligations apply to all types of damage to the product provably caused by a manufacturing defect.
3. The warranty does not apply to mechanical damage to the product.
4. The warranty period of the product is 12 months from the date of sale.

The warranty does not apply to:

- Products if malfunctions in them occurred as a result of violation of the rules of operation and transportation.
- Damage caused by excessive loads, improper handling, improper storage or maintenance, improper removal of the knife.
- For components worn out during operation that have a limited service life (POWER CORDS, brushes, plastic leashes, etc.)
- Damage caused by ingestion of foreign objects, substances, insects.
- Self-repair of the product or repair carried out in non-specialized workshops.


The consumer is deprived of the rights to warranty service in the following cases:

- when the warranty period expires;
- in the presence of mechanical damage to the outer parts of the product;
- in case of violation of the rules of operation.

Cleaning, lubrication of products, sharpening of knives after any period of operation are not included in the cost of warranty service.

To perform warranty repairs, you must present documents certifying the purchase of this product, this product instruction with the signature of the seller and the seal of the trading organization.

KURO NEKO KANTAN

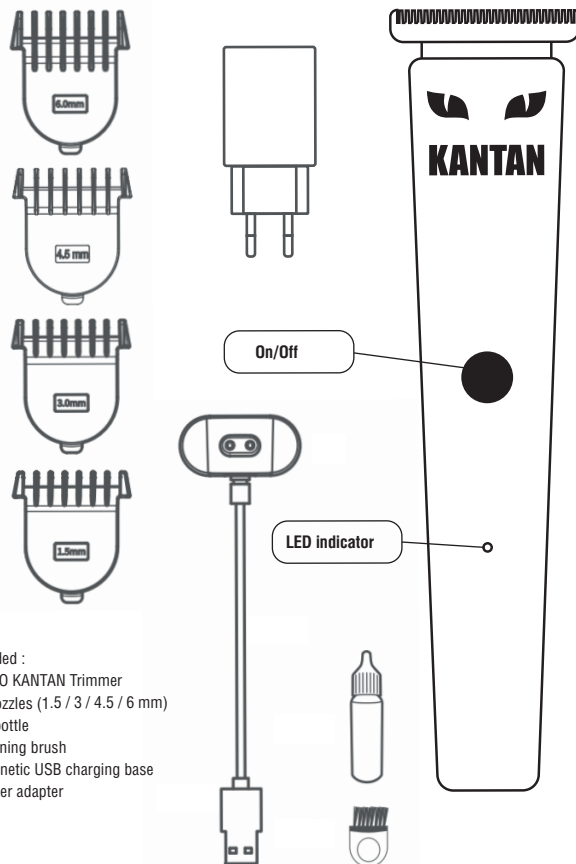

Included :

- NEKO KANTAN Trimmer
- 4 Nozzles (1.5 / 3 / 4.5 / 6 mm)
- Oil bottle
- Cleaning brush
- Magnetic USB charging base
- Power adapter

TECHNICAL SPECIFICATIONS

Hair Clipper	Motor	Working voltage: 7V Motor rotation speed: 5500 rpm
	Battery	Capacity: 1400 mAh Charging time: 180 hours Working time: 300 hours
Adapter		Input: 100-240 V, 50-60 Hz Output: 5 V, 1000 MA

« _____ » _____ 20__ y. « _____ » _____ 20__ y.

Seller _____ Signature _____ Seller _____ Signature _____

place for stamp

place for stamp

OPERATING INSTRUCTIONS

Important!

The device was not charged at the factory. Please charge the device at least 3 hours before the first use to achieve maximum performance.

Charging method

This trimmer uses a magnetic USB charging base to charge.

—Please turn off the trimmer before charging. Hold the trimmer with the charging contactors at the bottom of the trimmer body pointing downwards and bring the trimmer closer to the charging base so that the charging contactors come into contact with the charging contacts on the charging base (the trimmer head is directed towards the base without a power cord). The charging base will automatically be attracted to the trimmer.

—Insert the USB terminal into the adapter (there is no adapter included with the trimmer), and

Then plug the adapter into a power outlet and the status indicator will turn red as soon as charging starts. As soon as the trimmer is fully charged, the indicator lights up green.

If the trimmer must remain unused for a long period of time, store it in a safe, cool, dry place. Do not wrap the cord tightly around the blades. Do not hang the machine by the power cord.

Blade Care

- Only the cutting head (set of blades) can be rinsed with water.
- DO NOT immerse the trimmer in water and do not wash it under running water.
- DO NOT disassemble this trimmer. Improper assembly may result in electric shock or fire.
- DO NOT use compressed air, steel wool, abrasive detergents or aggressive substances liquid (e.g. oil or acetone) to clean this trimmer.



Installation of comb attachments

Guide combs should be installed by first hooking the teeth of the blade to the front side of the guide comb.

Then press the back of the guide comb down until it snaps into place. Attach the guide combs according to the desired length of the haircut. (Once the comb is properly installed, it does not move or come off.)

Cleaning method.

Regular cleaning of the device is necessary to maintain optimal performance and maximum safety of your trimmer. Do not wet the trimmer and knives! Use a special brush for cleaning (included)

Cleaning the typewriter.

Use a cleaning brush to clean the knife head. Clean the hair remaining between the upper/lower blades. Do not remove the spring of the cutting head, this may cause damage.

After cleaning, apply 1-2 drops of oil to the cutting head. After leveling the cutting knives, you should hear a "click", which indicates that the blades are installed correctly.

Troubleshooting

If your trimmer is working or charging incorrectly, please check the following:

- Check for current in the outlet by connecting another device to the outlet.
- Make sure that the device is not connected to a power source when it turns off automatically.
- Make sure that the contacts between the trimmer and the power adapter are clean and free of hair or other contaminants.
- Make sure that the cutting head is installed correctly.
- Make sure the trimmer is fully charged.